


POWER TOOLS

PRO 3810 A - ROTARY HAMMER			
Packing	Power	Specifications	Mode
2	1050 W	38 MM	BMC

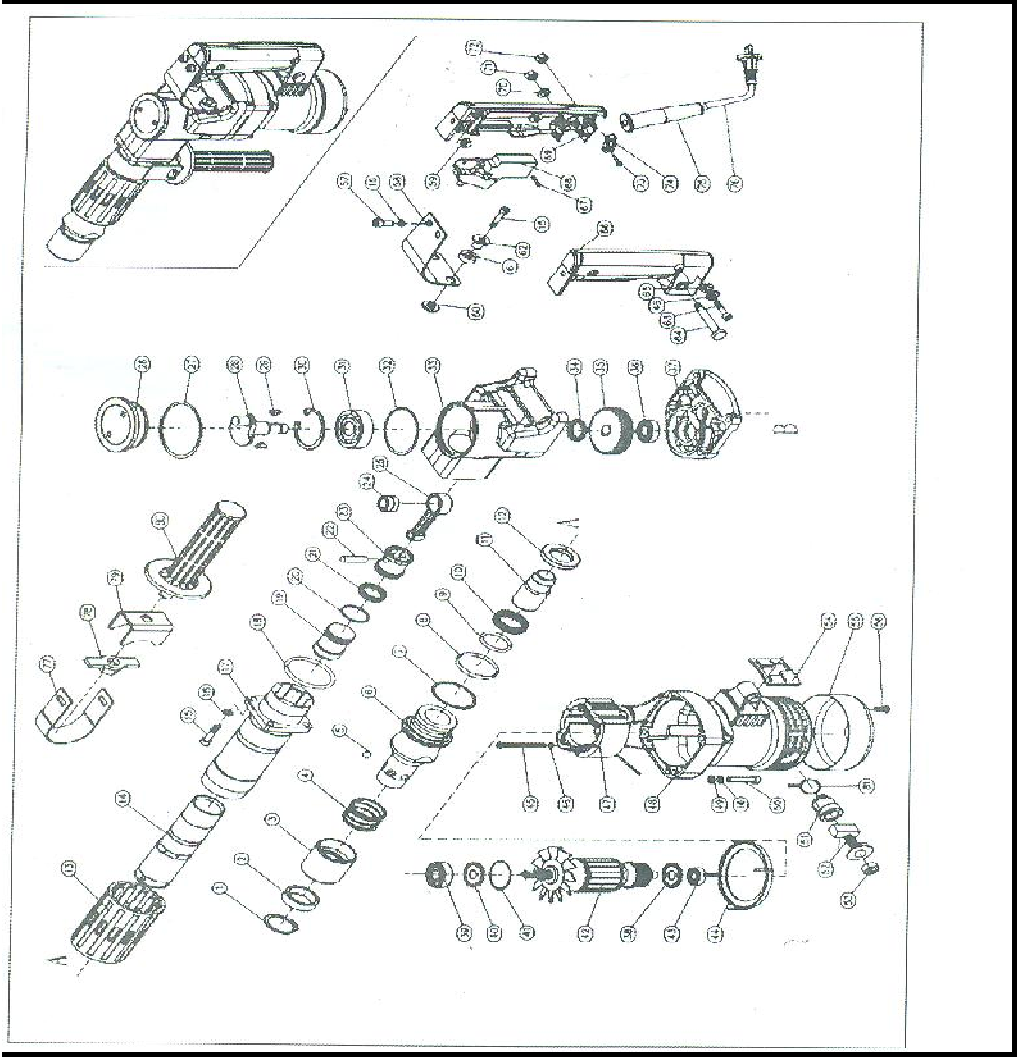

PRO 3810 A - ROTARY HAMMER

NO.	Name of Spare parts	NO.	Name of Spare parts
1	Ring	45	Self-Tapping Screws
2	Ring	46	Spring Washer
3	Lock Sleeve	47	Stator
4	Spring	48	Shassis
5	Ball	49	Washer
6	Grip Slipper	50	Seal Lock Hex. Socket Hd. Bolt
7	Washer	51	brush Holder
8	O-Ring	52	Brush
9	O-Ring	53	Brush Cover
10	Seal Ring	54	Washer
11	Punch Hammer	55	Bottom case
12	Ring	56	Self-Tapping Screws
13	Collet	57	Seal Lock Hex. Socket Hd. Bolt
14	Cylinder	58	Elastic Support
15	Seal Lock hex. Socket Hd. Bolt	59	Nut
16	Spring Washer	60	Washer
17	Cyliner Case	61	Washer
18	O-Ring	62	Sleeve
19	Impact Piston	63	Seal Lock Hex. Socket Hd. Bolt
20	O-Ring	64	Pin
21	X-Ring	65	Washer
22	Piston Pin	66	left handle
23	Piston	67	Nut
24	Needle Bearing	68	Switch
25	Connection Rod	69	Right
26	Oil Cover	70	Handle
27	O-Ring	71	Locknut
28	Crank Shaft	72	Nut
29	Wood Ruff Key	73	Self Tapping Screws
30	Ring	74	Cable Plate
31	Bearing	75	Cable Cover
32	O-Ring	76	Cable
33	Crank case	77	Hoop
34	Seal Ring	78	Locknut Components
35	Gear	79	Auxiliary Grip
36	Bearing	80	Auxiliary handle
37	Inner Cover	81	Cooling
38	plate	82	Washer
39	Bearing		
40	Washer		
41	O-Ring		
42	Rotor		
43	Bearing		
44	Fan Guide		